

Karbons Alfa A18

User Manual

Safety Precautions



Please read through the following briefings carefully, and act in accordance with these rules, so as to prevent causing any danger or violating any law.

SAR Value

--Your mobile phone model has been designed to comply with applicable safety requirements for exposure to radio waves. The radio wave exposure guidelines employ a unit of measurement called Specific Absorption Rate (SAR). The maximum recommended SAR limit for mobile handset is 1.6 W/Kg averaged over a 6 minutes period and taken over a volume containing a mass 1g of human tissue.

The highest SAR value for this mobile phone model is **0.520 Watt/Kg** averaged over a 6 minutes period and taken over a volume containing a mass 1g of human tissue.

--Use cell phone when the signal strength is good. Keep your calls short or instead use headset or send a text message. This advice applies especially to children, adolescents and pregnant women.

--If you are using a Bluetooth headset device, please make sure it has a low power emitter.

ROHS Declaration

Declaration of Conformity with the requirements of the e-waste Management Rules, 2011 (adopted by Notification S.O.1035 (E) of Ministry of Environment and Forests)

The Product is in conformity with the requirements of Rule 13 of the e-waste Rules. The content of hazardous substance with the exemption of the applications listed in SCHEDULE II of the e-waste Rules:

1. Lead (Pb) – not over 0.1% by weight;

 
 
 
2. Cadmium (Cd) – not over 0.01% by weight;
3. Mercury (Hg) – not over 0.1% by weight;
4. Hexavalent chromium (Cr6+) – not over 0.1% by weight;
5. Polybrominated biphenyls (PBBs) – not over 0.1% by weight;
6. Polybrominated diphenyl ethers (PBDEs) – not over 0.1% by weight.

Insert SIM Cards and T-card

The phone is a Dual SIM mobile phone allowing you to use the facility of two networks.

Steps:

1. Remove the back cover of the device and battery.
2. Insert the SIM cards and T-card in the device.
3. Attach the battery.
4. Push the battery cover until it clicks into place.

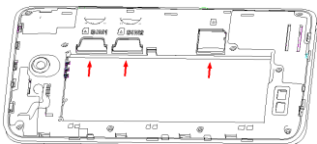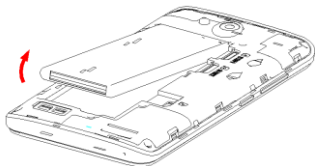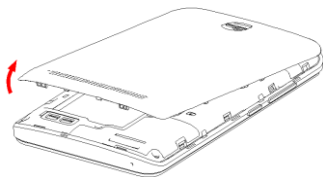




Your Phone



Description Icons

Icons	Descriptions	Icons	Descriptions
	Shows the phone's network signal strength.		Show the phone's battery capacity.
	Speaker has been activated.		You have unread SMS.
	Call on hold		USB storage Turned on.
	The ringing type is set on Vibration.		Flight Mode
	Wi fi is ON		Data network in use.

Icons	Descriptions	Icons	Descriptions
	You have missed calls.		Alarm is active.
	In call		

Charging the battery

The rechargeable Li-ion battery that comes with your phone is ready to be used, but is not charged. It is easy to do & can be done in 4 simple steps below:

1. Connect the charger to your phone, and plug it into a socket.
2. The battery indicator in the corner of the screen will scroll to show you it's charging.
3. When fully charged, the battery indicator will stop scrolling.
4. Disconnect the charger from your mobile, and unplug.

Power ON/OFF

Press the power key to power-ON/OFF the phone.

When you turn your phone on, it'll automatically check the SIM and show the following information on screen:

- **Input SIM1 PIN:** If you've set a PIN for your SIM1.

Note:

The PIN is supplied with your SIM. Please replace it with your own PIN code as soon as possible. Enter the wrong PIN three times, and your SIM will be locked. Then you'll need to contact your network service provider to ask for a PUK code to unlock it. It is applicable for both the SIMs if you are using 2 SIM Cards.

Enter Main Menu

In Idle mode, press the Menu key to enter the main menu on the desktop and click the Home key to return.

Enter Sub Menu

Once at the main menu, click the icon to select the submenu,

press **Back Key** to return to the previous menu, and press the **Home Screen** to return to the home screen.

Use Notification Panel

As a new notification appears in the notification area, slide down in the area to view the contents of the notification.

Expand Main Interface

The main interface may extend and exceed the screen width to provide more space for newly added shortcuts and tools.

Slide your finger horizontally on the main interface to extend to the left or right area of the main interface.

Add icons on the main interface

You can long press the icon on the main menu until it's enlarged and the mobile phone vibrates, and copies the icons in the main menu to the main interface.

Move icons on the main interface

1. Long press the icon on the main interface until it's enlarged.
2. Drag the icon to the desired position and then release it.

Delete icons on the main interface

1. Long press the icon on the main interface until it's enlarged.
2. Drag the icon to "Remove" to delete it.

Change wallpapers

1. Long press "Touch screen" to open the menu.
2. Choose "WALLPAPERS"
2. Choose from available wallpapers, and Select the wallpaper and press "Set wallpaper" to complete.

Install APK through File Manager

APK is a supported file format for the Android mobile operating system.

1. Please copy the downloaded APK file into the SD card, and

then insert the SD card into the phone.

2. In Idle mode, click Main Menu to enter the main menu.
3. Click “File Manager” to enter the directory of SD card.
4. Click the APK file you wish to install, and follow the installation wizard.

Taking Care of your Device

Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:

- Always keep the small parts of the phone away from children.
- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits. If your device does get wet, remove the battery, and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use indoor chargers.

Sales Tracker: Upon first use of your device, your device will send information related to your mobile number, IMEI numbers, location details and other software details through SMS automatically. Operator tariff charges shall be applicable for SMS.